



Digital library guide for Exocad software


1 Select implant library

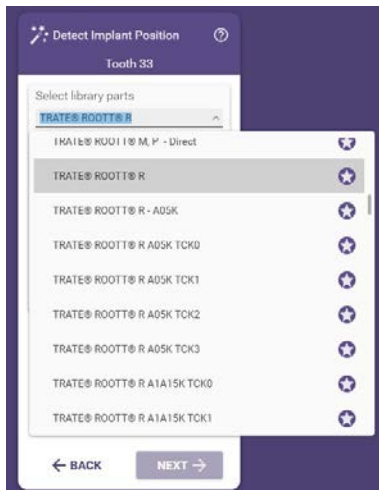


2 Select the scan abutment used for scan

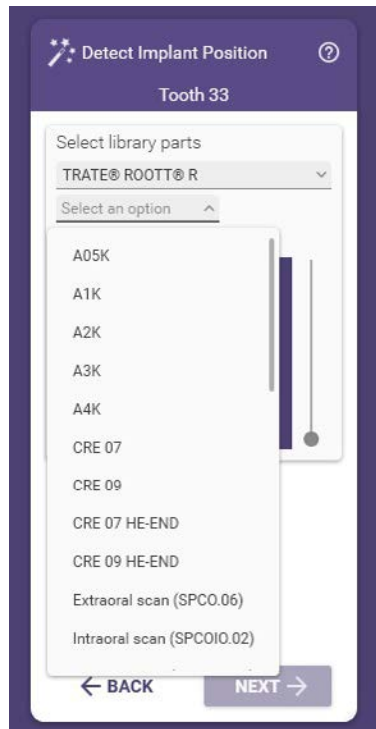

3 Select the connection geometry and cement gap

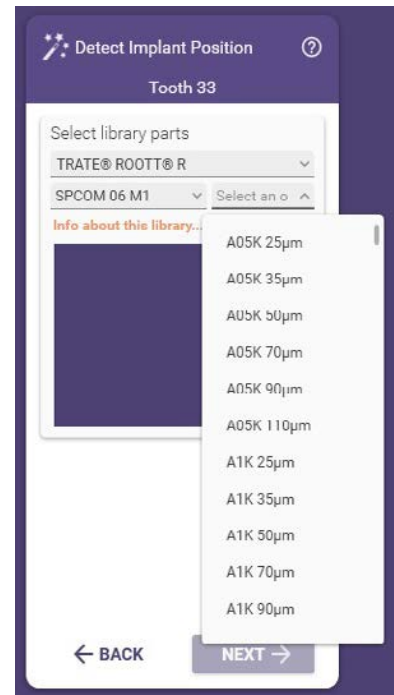

4 Detect implant position by clicking the marked point on scan

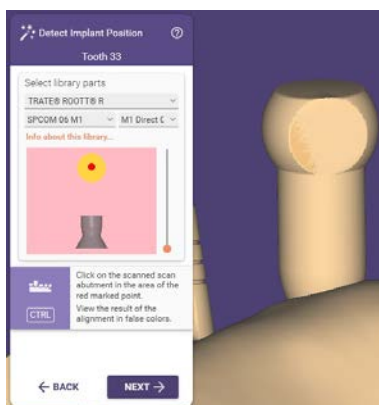

5 Define the screw channel in the "Abutment Bottoms" window. In "Advanced" select clickable or draggable and choose screw channels angle.

